 


RECYCLING

Join our commitment to a sustainable future

Once your **Modelo Futbol Neon Sign** is at 'end of life' please don't dispose in general waste. Kindly dismantle and recycle and suggested below.

Before disassembly ensure unit is not connected to a power source.
Use a Pozidriv screwdriver and wire cutters to disassemble the unit.
Once parts are separated follow the recycling instructions.

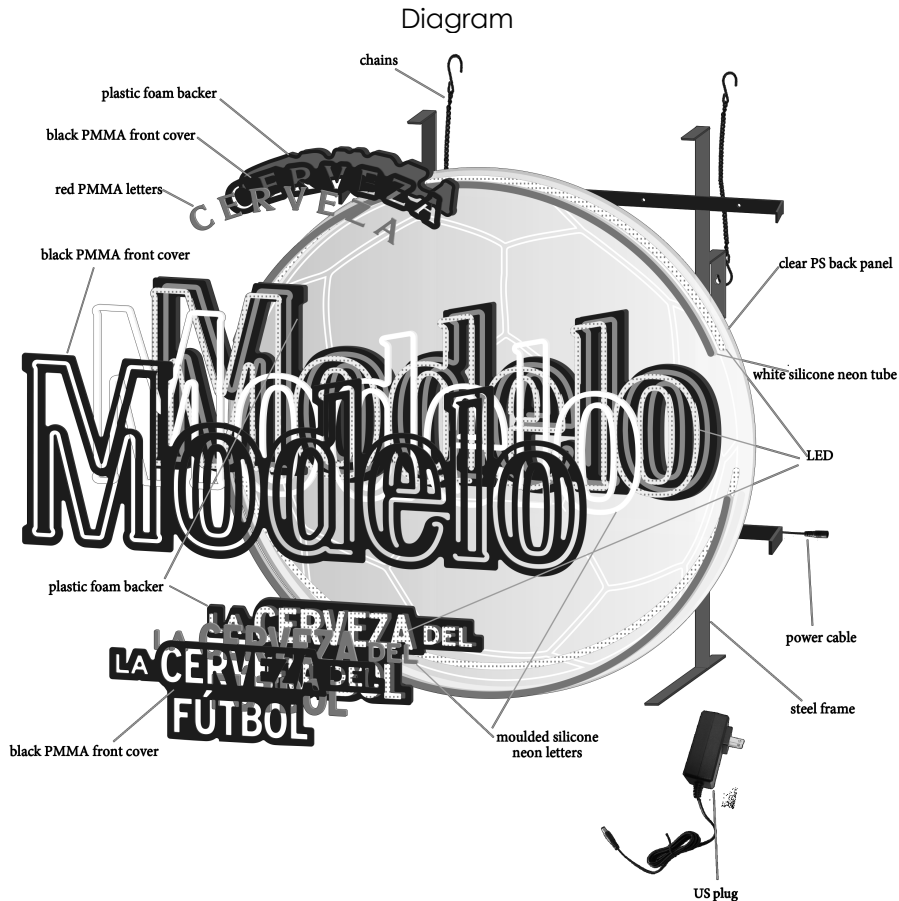

RECYCLING DIRECTIONS

METAL: Steel frame, steel fixings, chains - choose metal recycling bins.

LEDs, PCB and Plug/Adapter: choose Electronic Equipment recycling bins.

PLASTICS: Plastic packaging materials, PMMA, Silicone Neon, plastic backer, choose plastic recycling bin and where possible avoid general waste. Also, plastic packaging materials should be recycled.

CARDBOARD PACKAGING: use the cardboard paper recycling bin.

INSTRUCTION MANUAL

Modelo Futbol Neon Sign


Drink responsibly. Modelo Especial® Beer. Imported by Crown Imports, Chicago, IL



Carefully remove **Modelo Futbol Neon Sign** from packaging. Try reuse the packaging or keep for storage. If disposing, see **Recycling** Section.

Accessories provided

1. USA Plug
2. Wall anchors & screws
3. Hanging chains

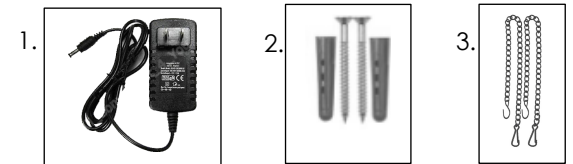

Note: this equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician to help.

CUSTOM ELECTRONICS

531pcs x LEDs type 2835 – max power 36W.

Adapter: input 110-240V 50/60Hz - output 12VDC, 3A US/UL plug-in adapter.

CONTACTS

Contact: hello@illumx.com for recycling or general information. Reference our serial number on the product label.

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **Modelo Futbol Neon Sign** in a clean and dry environment.

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall or place of installation.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- ensure adapter is pushed in completely and connected to the sign.
- check for visible damage to power adapter or connections.

Flickering

- switch off, remove adapter, wait for 2 hours and reconnect. If flickering persists, purchase an identical adapter (12VDC, 3A). If this doesn't rectify the issue recycle this product.

Overheating

- if sign is too hot, or smells bad, unplug and allow to cool.
- check the sign is not blocked or has restricted airflow.

Broken:


- Use qualified electrician to inspect, never attempt to repair - see Recycling Section.

INSTALLATION GUIDE

WALL MOUNTING

Select a location with easy access to a power outlet. Avoid direct sunlight or moisture.

Tools required:

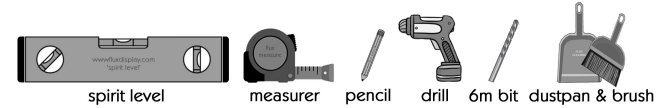

- Use a spirit level, measuring device and pencil to mark the hole-centres.
- Depending on the wall type choose the correct 6mm drill bit.
- Carefully drill the wall **ATTENTION** wires & pipes.
- Tap-in wall plugs/anchors until flat to wall.
- Screw-in screws until 10mm exposed.
- Using **2 persons** lift the sign and align the wall screws with the keyhole slots in the sign. Ensure the screws have strong connection.
- Connect the 12V USA plug to the sign, plug-in to wall socket, switch ON and enjoy.



HANGING

Find suitable place to hang the sign, consider safety and available electricity.


- Ensure chosen place can take the weight.
- Using **2 people** attach chains to the sign and attach to your chosen hanging area above.
- Connect the plug to the sign and connect the sign to available electricity.

CHANGE NEON COLOR

Locate & Scan QR Code on back of Sign



**Download App
called Lotus LanternX**

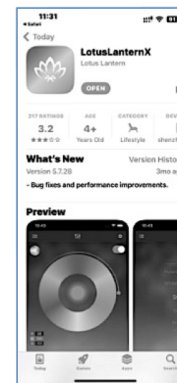

Pair your device



Choose your teams color

