


Recycling

end of life instructions



Join our commitment to a sustainable future.
Once your **GUINNESS Harp Neon Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical and electronic waste collection point.

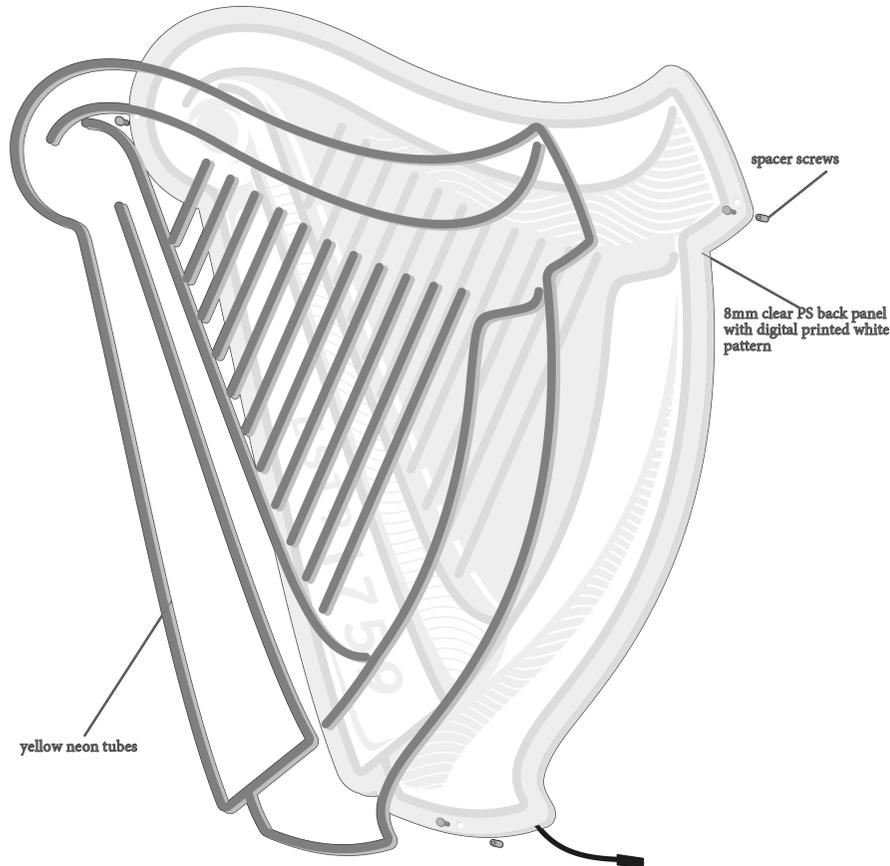

RECYCLING INSTRUCTIONS


- METAL:** choose metal recycling bin
- LED, PCB and Plug/Adapter:** choose Waste Electrical and Electronic Equipment (WEEE) recycling bins
- PLASTICS/RUBBER:** choose plastic recycling bin avoid general waste.
- CARDBOARD PACKAGING:** use the cardboard paper recycling bin



Instruction Manual

Essential to read before using this product

GUINNESS HARP NEON SIGN

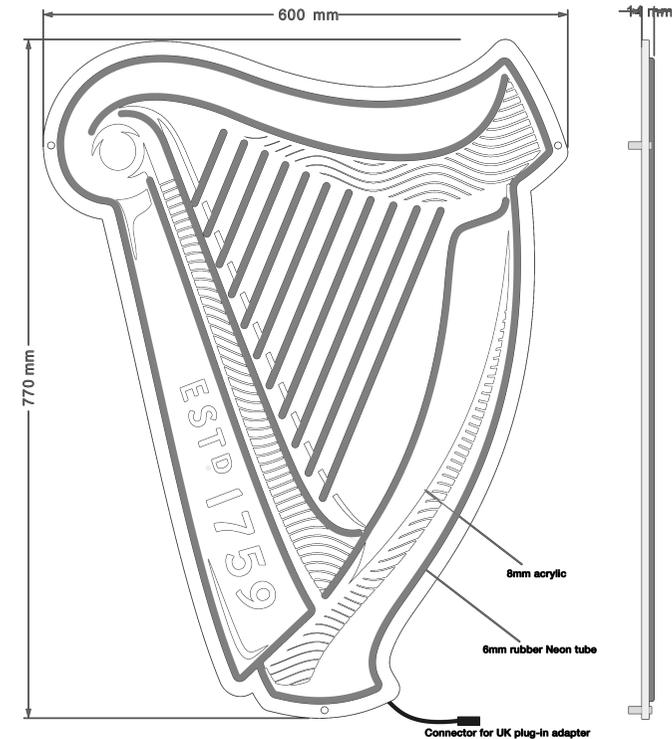

Carefully Does It

Carefully remove your **GUINNESS Harp Neon Sign** from the packaging. Reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

Accessories provided:

1. 12V UK adapter plug
2. 3 x Wall plugs (anchors)
3 x Self-tapping screws
3 x Spacers with Decorative screw heads
3. 2 x Hanging chains



PRODUCT ELECTRONICS

PCB-81 6pcs LEDs type2835 – max power 36W. Adapter: input 110-240V 50/60Hz - output 12VDC, 3A UK Adapter Plug.

CONTACTS

All information: hello@illumx.com

Tel: +44(0)161 464 5687

Address: **illumx** Ltd, Earl Road, Cheadle Hulme, Cheshire, SK8 6GN, UK

Batch no: W2659L

Made in China: 15th October 2025.

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **GUINNESS Harp Neon sign** in a clean and dry environment.

WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken:

- a) if out of warranty, seek professional advice, use qualified electrician to repair.


Installation

WALL MOUNTING


Select location with easy access to electricity (Wall socket). Try to avoid areas with direct sunlight or excessive moisture.

Tools required


Use a spirit level, measuring device and pencil: mark the holes, as shown below.

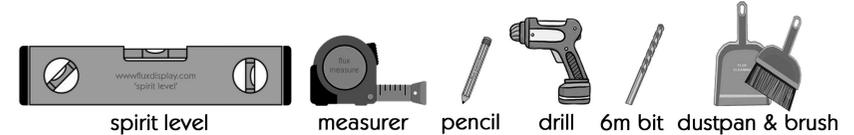

Marking the Holes

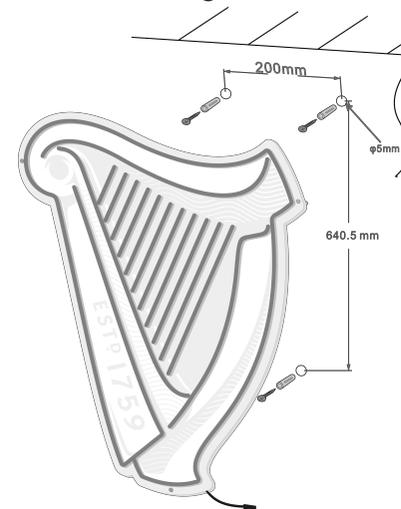

Fixing to the Wall

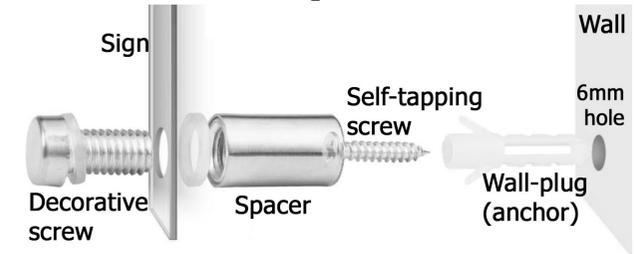

1. Drill a 6mm hole and gently tap in the Wall-plug (anchor), until flat to the wall.
2. Push Self-tapping screw through the Spacer and screw to the wall. Do not over-tighten, however, ensure strong.
3. Using 2 persons, lift the sign and align with spacers.
4. Push Decorative screws through the Sign into the Spacer and screw until tight.
5. Ensure all fixings or strong, safe and fit for purpose.

6. Connect your 12V UK Adapter Plug to the sign.

7. Plug-in to an available wall socket, switch ON and enjoy your GUINNESS Harp Neon Sign

8. Finally, keep everyone happy and sweep-up ☺

HANGING

1. Find a suitable location to hang the sign, consider public safety and available electricity.
2. Ensure location can take the weight of your **GUINNESS HARP Neon Sign**.
3. Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
4. Connect the plug to the sign and connect the sign to available electricity.