


RECYCLING

Join our commitment to a sustainable future

Once your **Pacifico Action Sports Neon Sign** is at 'end of life' please don't dispose as general waste. Kindly dismantle and recycle and suggested below.

Before disassembly ensure unit is not connect to a power source. Use a Pozidriv screwdriver and wire cutters to disassemble the unit. Once the parts a separated follow the recycling instructions

diagram

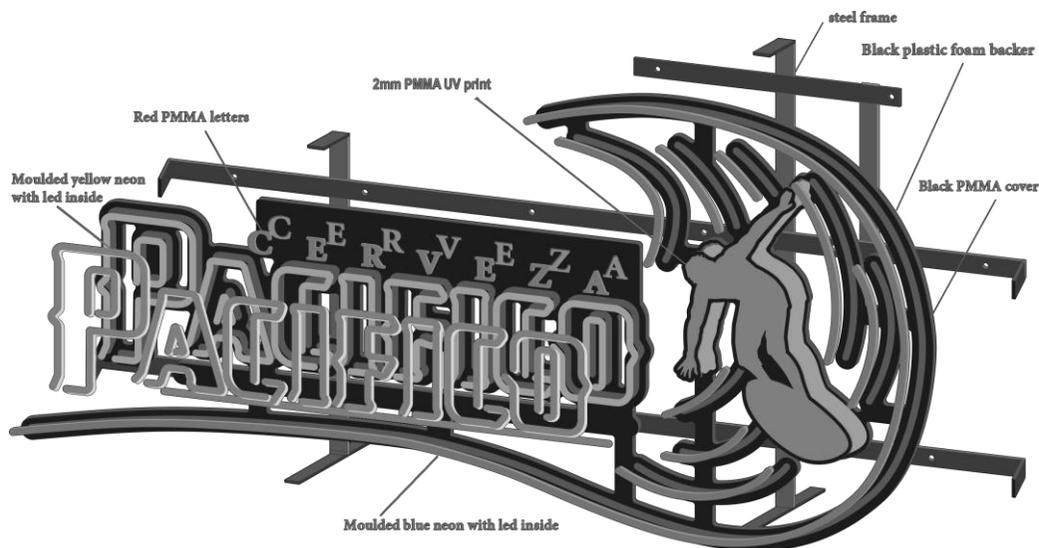

RECYCLING DIRECTIONS

METAL: Steel frame, screws, nuts, bolts & washers - choose metal recycling bins.

LED, PCB and Plug/Adapter: choose Electronic Equipment recycling bins.


PLASTICS: Plastic packaging materials, PMMA, Neon, plastic foam, choose plastic recycling bin and where possible avoid general waste. Also, plastic packaging materials should be recycled.

CARDBOARD PACKAGING: use the cardboard paper recycling bin.

Instruction Manual

Pacifico Action Sports Neon Sign

Essential to read before using this product

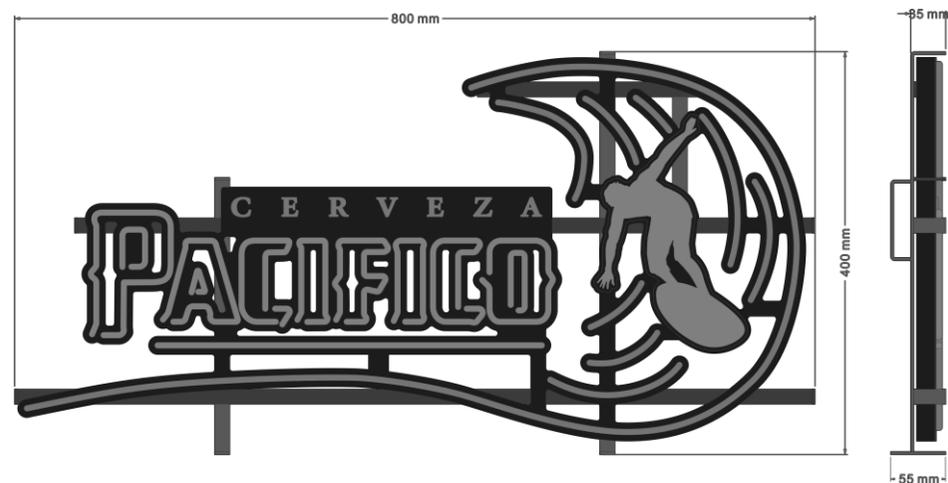


CAREFULLY DOES IT

Carefully remove the **Pacifico Action Sports Neon Sign** from the packaging. Try to reuse the packaging or keep for storage. If disposing, see **Recycling** Section.

Accessories provided:

1. USA Plug
2. Inline dimmer
3. Wall anchors & screws
4. Hanging chains

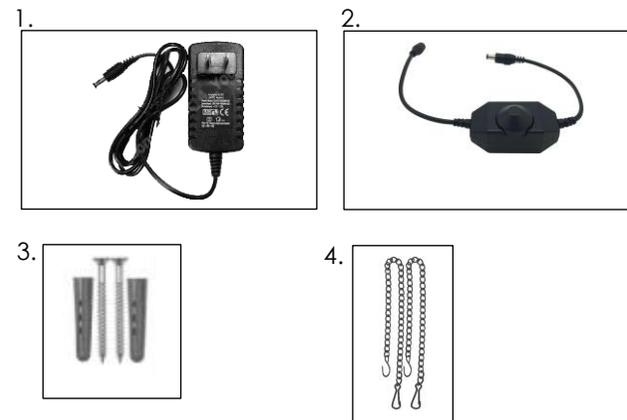

CUSTOM ELECTRONICS

PCB-765pcs LEDs type2835 – max power 36W.

Adapter: input 110-240V 50/60Hz - output 12VDC, 3A US/UL plug-in adapter.

CONTACTS

Contact: hello@illumx.com for recycling or any other information, reference serial number on the product label.

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **Pacifico Action Sports Neon Sign** in a clean and dry environment.

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign.
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken:

 
- a) Use qualified electrician to inspect, never attempt to repair - see Recycling Section.

INSTALLATION GUIDE

WALL MOUNTING


Choosing Location: Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

Tools: Gather the following items



Follow the instructions

1. Use a spirit level, measuring device and pencil to mark the hole-centres.
2. Depending on wall choose the correct type 6mm drill bit. **ATTENTION** hidden wires and pipes. Carefully drill the holes.
3. Gently tap-in wall anchors until flat to the wall.
4. Screw-in provided screws until 10mm exposed. Ensure screws are tight and strong.
5. Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign is strong and will not fall.
6. Connect the USA plug to the sign, plug-in to the available wall socket, switch ON and enjoy.
7. Keep everyone happy and clear the debris 😊

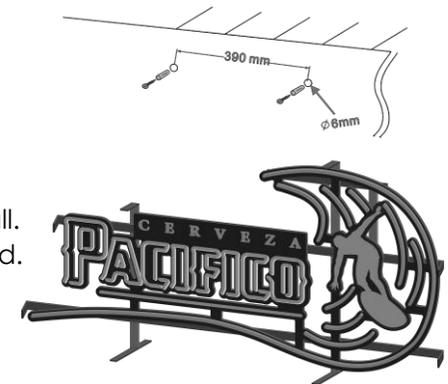

Hanging

1. Find a suitable place to hang the sign, whilst considering available electricity.
2. Ensure the **Pacifico Action Sports Neon Sign** can take the weight. To check, attach the chains to your chosen area and very gently pull down on the chains to ensure it's going to be strong enough (never pull too hard and damage the hanging area)
3. Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
4. Connect the plug to the sign, connect sign to the available electricity and enjoy.