

# RECYCLING


end of life instructions



Join our commitment to a sustainable future.

Once your **GUINNESS Harp Bar Top Neon Sign** is at 'end of life' dismantle and recycle instructed below.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical and electronic waste collection centre.

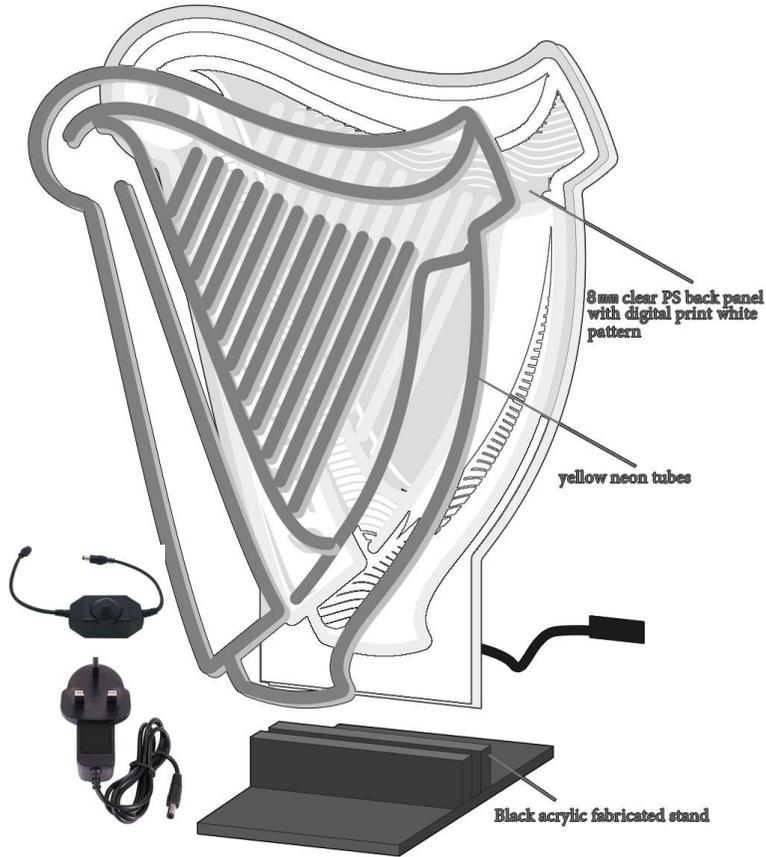

## RECYCLING INSTRUCTIONS

**METAL:** choose metal recycling bin

**LED, PCB, Plug/Adapter & Inline Dimmer:** choose Waste Electrical and Electronic Equipment (WEEE) recycling bins

**PLASTICS/RUBBER:** choose plastic recycling bin avoid general waste.


**CARDBOARD PACKAGING:** use the cardboard paper recycling bin



# Instruction Manual

Essential to read before using this product

## GUINNESS HARP BAR TOP NEON SIGN

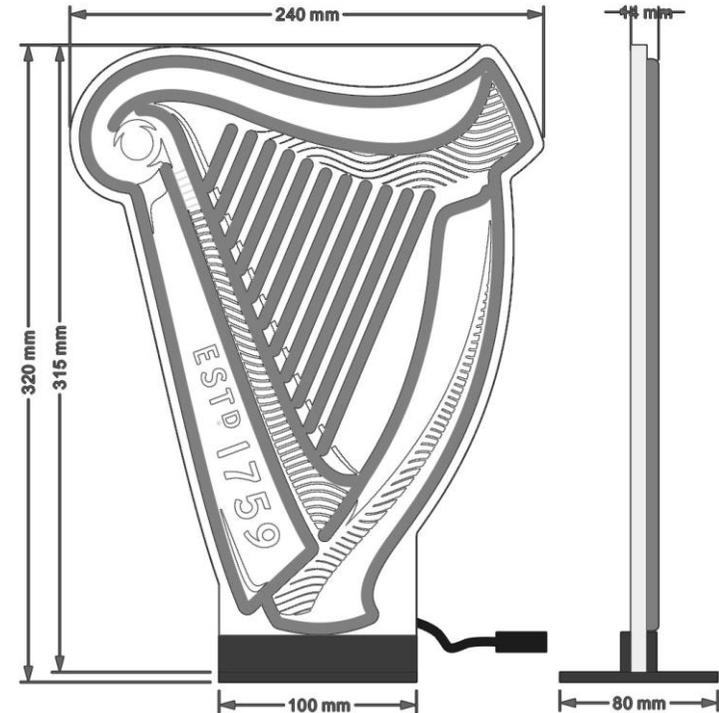

### Carefully Does It

Carefully remove your **GUINNESS Harp Bar Top Neon Sign** from the packaging. Reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

### Accessories provided

1. 12V UK plug
2. In-line dimmer With ON/OFF
3. Bar Stand



## PRODUCT ELECTRONICS

PCB-270pcs LEDs type2835 – max power 24W. Adapter: input 110-240V 50/60Hz - output 12VDC, 2A UK Adapter Plug

## CONTACTS

All information: hello@illumx.com

Tel: +44(0)161 464 5687

Address: **illumx** Ltd, Earl Road, Cheadle Hulme, Cheshire, SK8 6GN, UK

## MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **GUINNESS Harp Bar Top Neon sign** in a clean and dry environment.

## WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed down.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

## TROUBLESHOOTING

### Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

### Flickering

- a) remove adapter and reconnect - secure connections.

### Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

### Broken:

- a) if out of warranty, seek professional advice, use qualified electrician to repair.

## INSTALLATION

Once removed from the packaging, take your **GUINNESS Harp Bar Top Neon Sign**, Bar Stand, inline dimmer and 12V UK adapter plug - carefully install as instructed below:



1. Ensure you have available electricity.
2. Connect your 12V UK adapter plug to the plug socket.
3. Turn the dimmer ON and set the brightness.

**Enjoy your Guinness Harp Bar Top Neon Sign**