

RECYCLING

Join our commitment to a sustainable future

Once your **Corona Premier Golf Neon Sign** is at 'end of life' please don't dispose as general waste. Kindly dismantle and recycle and suggested below.

Before disassembly ensure unit is not connected to a power source.

Use a Pozidriv screwdriver and wire cutters to disassemble the unit.

Once the parts are separated follow the recycling instructions.



RECYCLING DIRECTIONS

METAL: Steel frame, steel fixings - choose metal recycling bins.


LED, PCB and Plug/Adapter: choose Electronic Equipment recycling bins.

PLASTICS: Plastic packaging materials, PMMA, Silicone Neon, plastic backer, choose plastic recycling bin and where possible avoid general waste. Also, plastic packaging materials should be recycled.

CARDBOARD PACKAGING: use the cardboard paper recycling bin.

Instruction Manual Corona Premier Golf Neon Sign


Drink responsibly. Corona Premier® Beer. Imported by Crown Imports, Chicago, IL
Per 12 fl. oz. average analysis: Calories 90, Carbs 2.6g, Protein 0.7g, Fat 0.0g

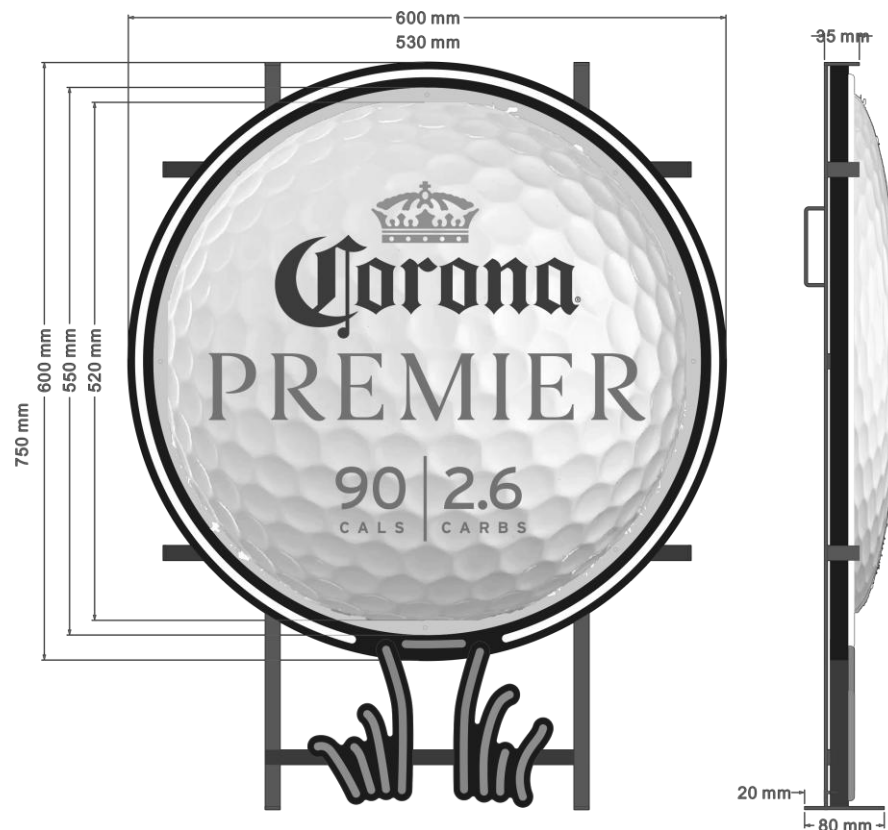

Carefully remove the **Corona Premier Golf Neon Sign** from the packaging. Try to reuse the packaging or keep for storage. If disposing, see **Recycling** Section.

Accessories provided

 1. USA Plug
2. Wall anchors & screws
3. Hanging chains

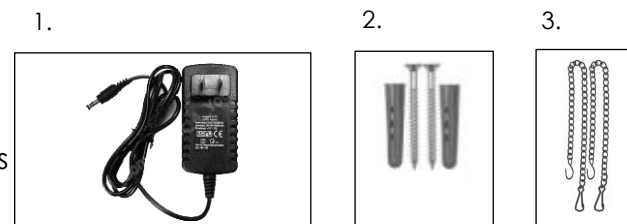

CUSTOM ELECTRONICS

PCB-810pcs LEDs type 2835 – max power 36W.

Adapter: input 110-240V 50/60Hz - output 12VDC, 3A US/UL plug-in adapter.

CONTACTS

Contact: **hello@illumx.com** for recycling or any other information, reference serial number on the product label.

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **Corona Premier Golf Neon Sign** in a clean and dry environment.

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable/s connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- a) ensure the USA plug is pushed into the AC socket completely. Ensure the jack plug on the AC plug cable is pushed into the socket.
- b) check for visible damage to power adapter or connections.

Flickering

- a) check you have used the USA plug supplied with this sign - remove the plug and reconnect, ensuring all connectors are pushed all the way in.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken:

- a) Use an electrician to inspect, never attempt to repair - see Recycling Section.


INSTALLATION GUIDE

WALL MOUNTING

Choosing Location: Select a location with easy access to an AC power outlet. Avoid places with direct sunlight or excessive moisture.

Tools: Gather the following items.

Follow the instructions

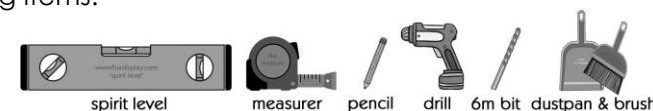

1. Use a spirit level, measuring device and pencil to mark the hole-centres.
2. Depending on wall choose the correct type 6mm drill bit. **ATTENTION** hidden wires and pipes. Carefully drill the holes.
3. Gently tap-in wall anchors until flat to the wall.
4. Screw-in provided screws 5-10mm exposed. Ensure screws are tight and strong.
5. Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign fixture is strong and secure ensuring it will not fall.
6. Connect the USA plug to the sign, plug-in to an available wall socket, switch ON and enjoy.
7. Keep everyone happy and clear the debris ☺



FREESTANDING

Your **Corona Premier Golf Neon Sign** is designed to freestand.

Find your ideal location with available AC electricity, then simply plug and play !

HANGING

1. Find a suitable place to hang the sign, whilst considering available AV power.
2. Ensure the **Corona Premier Golf Neon Sign** can take the weight.
To check, attach the chains to your chosen area and very gently pull down on the chains to ensure it's going to be strong enough (never pull too hard and damage the hanging area).
3. Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
4. Connect the USA plug to the sign, connect sign to the available AC power and Enjoy your **Corona Premier Golf Neon Sign** responsibly.