


Recycling

end of life instructions



Join our commitment to a sustainable future.
Once your **TD Neon Wall Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical/electronic waste collection center.

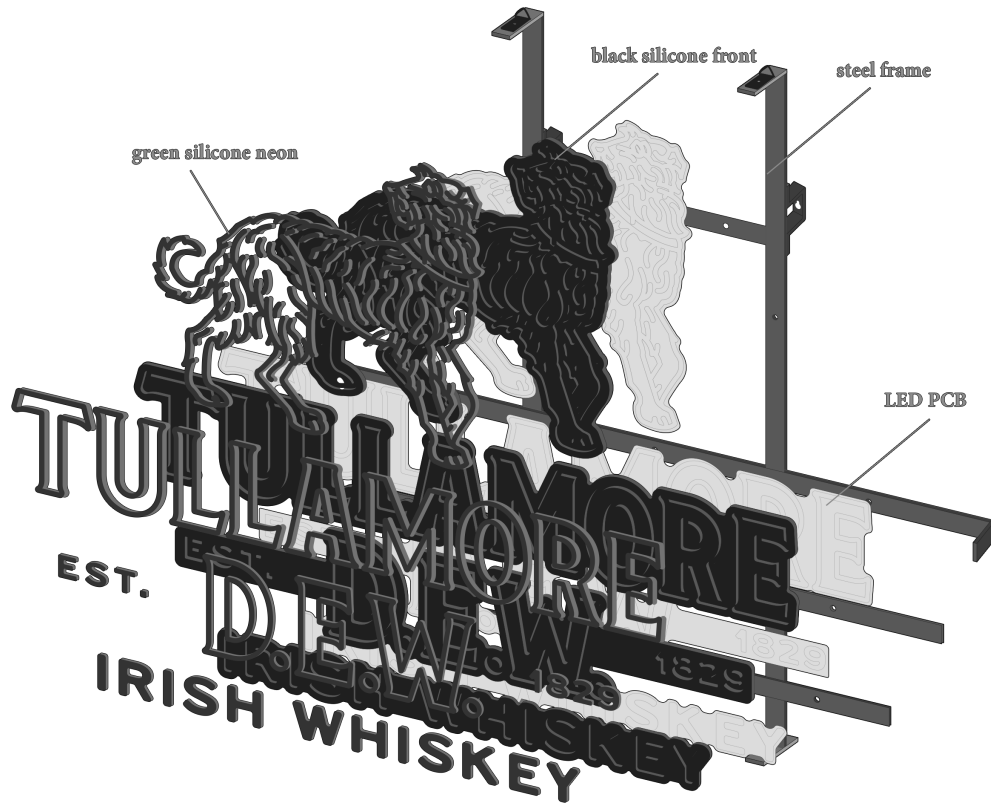

RECYCLING INSTRUCTIONS

METAL: choose metal recycling bin

LED, PCB and Plug/Adapter: choose Waste Electrical and Electronic Equipment (WEEE) recycling bins

PLASTICS: Silicone, choose plastic recycling bin avoid general waste bin.

CARDBOARD PACKAGING: use the cardboard paper recycling bin




USER GUIDE

Essential to read before using this product

TD Neon Wall Sign

Article No. 28000047

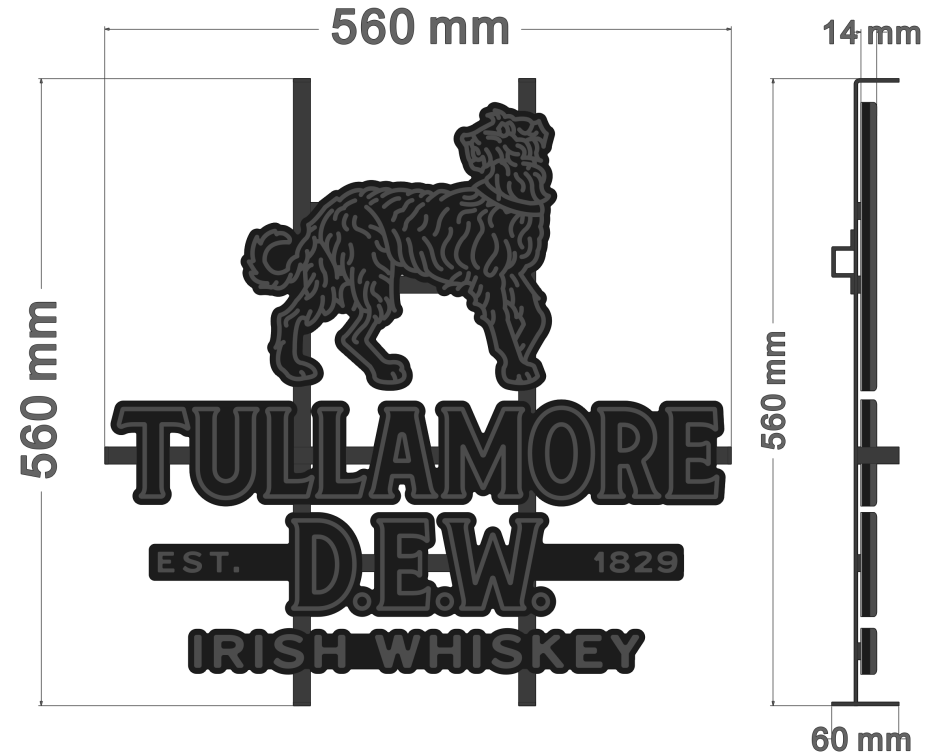


Carefully Does It

Carefully remove your **TD Neon Wall Sign** from the packaging. Try to reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

Accessories provided:

1. Multi Country Plug
2. Rawl plugs & screws
3. Hanging chains

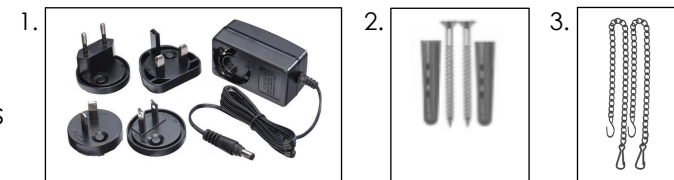

PCB-1041 pcs LEDs type2835 – max power 36W.

Adapter: input 110-240V 50/60Hz - output 12VDC, 3A multi-country plug-in adapter.

Contacts

Promocean The Netherlands BV LF FulfilmentZandzuigerstraat 105222 AH 's-Hertogenbosch
The Netherlands email: info@promocean.com Contact: LFE Promocean Operational Buying
Contact: info@promocean.com - Batch no: W2670CP - Made in China: 10/11/2025

Maintenance

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **TD Neon Wall Sign** in a clean and dry environment.

Warnings

Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or warranty is invalid. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced. To reduce the risk of strangulation the flexible wiring connected to this luminaire shall be effectively fixed to the wall if the wiring is within arm's reach.

DANGER! Never handle electrical items with wet hands. Do not use excessive force when inserting/removing connectors. This is a fragile item, always handle with care. Any misuse can cause accidents and/or injuries. This is not a toy – **keep away from children. Not suitable for persons under 18 year.**

Troubleshooting

Sign not lit

- ensure adapter is pushed in completely and connected to the sign
- check for visible damage to power adapter or connections.

Flickering

- remove adapter and reconnect - secure connections.

Overheating

- if sign is too hot, or smells bad, unplug and allow to cool.
- check the sign is not blocked or has restricted airflow.

Broken:

- Use qualified electrician to inspect or see our Recycling Section

Legal German Information only


Das Symbol des durchgestrichenen Mülleimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten. Auch Verkäufer mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Verkäufer von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Verkäufers alle Lager- und Versandflächen. Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alle Batterien oder Akkus sowie Altlampen, bevor Sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektrogesezt finden Sie auf www.elektrogesezt.de

Installation Guide

Wall mounting

Choosing Location: Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

Tools: Gather the following items



Follow the instructions

- Use a spirit level, measuring device and pencil to mark the hole-centres.
- Depending on wall choose the correct type 6mm drill bit. **ATTENTION** hidden wires and pipes.
- Gently tap-in rawl plugs until flat to the wall.
- Screw-in provided screws until 10mm exposed. Ensure screws are tight and strong.
- Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign is strong and will not fall.
- If using a multi country plug install the correct pins, as shown.



- Connect the plug to the sign, plug-in to the available wall socket, switch ON and enjoy.
- Keep everyone happy and clear the debris ☺



Hanging

- Find a suitable place to hang the sign, whilst considering public safety and available electricity.
- Ensure your chosen place can take the weight of the **TD Neon Wall Sign**. To check this, attach the chains to your chosen area and very gently pull down on the chains to ensure it's going to be strong enough (never pull too hard and damage the hanging area)
- Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
- If using a multi country plug install the correct pins, as shown.
- Connect the plug to the sign, connect the sign to the available electricity and enjoy.