


Recycling

end of life instructions



Join our commitment to a sustainable future.
Once your **CHIVAS Neon Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical and electronic waste collection point.

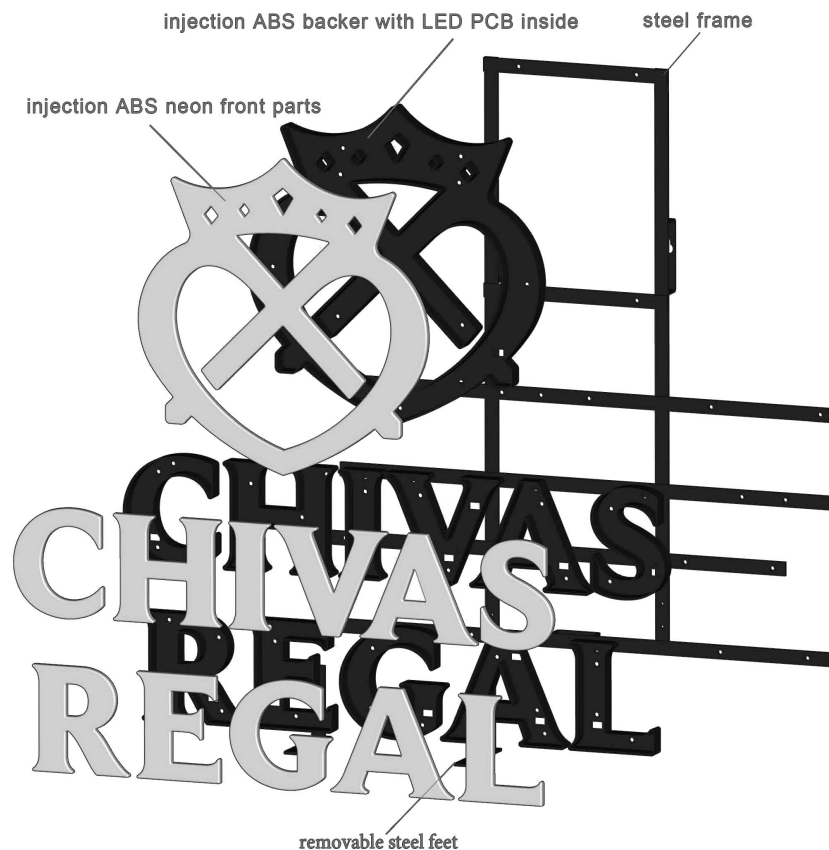

RECYCLING INSTRUCTIONS

METAL: choose metal recycling bin

LED, PCB and Plug/Adapter: choose Waste Electrical and Electronic Equipment (WEEE) recycling bins

PLASTICS: choose plastic recycling bin avoid general waste.

CARDBOARD PACKAGING: use the cardboard paper recycling bin



Instruction Manual

Essential to read before using this product

CHIVAS NEON SIGN 2025 - CR8376




Carefully Does It

Carefully remove your **CHIVAS Neon Sign** from the packaging. Reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

Accessories provided:

1. Multi Country Plug
2. Wall plug/anchors & screws
3. Hanging chains
4. Ski feet x 2
5. Thumb screws x 2

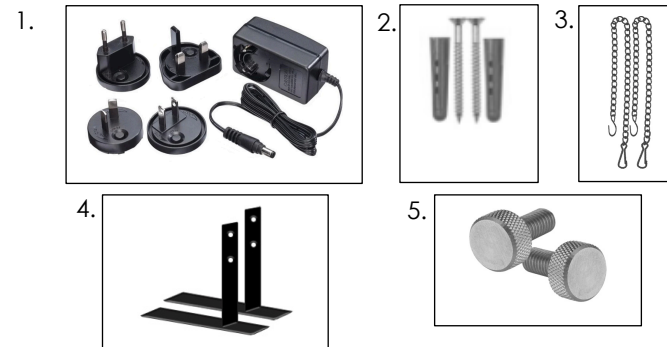

Custom Electronics: PCB-453pcs LEDs type2835 – max power 36W. Adapter: input 110-240V 50/60Hz 3.0A - output 12VDC, 3A multi-country adapter.

Contacts: hello@illumx.com for recycling info, WEEE compliance declarations or further information required. Batch no: W2642 - Made in China: October 2025.

Maintenance: Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **CHIVAS Neon sign** in a clean and dry environment.

WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken:

- a) If out of warranty, seek professional advice, use qualified electrician to repair.

Legal German Information only

Das Symbol des durchgestrichenen Müllimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.


Auch Verreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Verreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsfächen des Verreibers alle Lager- und Versandflächen.

Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektrogesezt finden Sie auf www.elektrogesezt.de

Installation Guide

Wall mounting - Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

Tools required:



1. Use a spirit level, measuring device and pencil to mark the hole-centres.
2. Depending on wall choose the correct type 6mm drill bit. **ATTENTION** hidden wires and pipes.
3. Gently tap-in Wall plugs/anchors until flat to the wall.
4. Screw-in screws until 10mm exposed. Ensure TIGHT.
5. Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Ensure its strong.
6. If using a multi country plug install the correct pins.



Choose: UK/EURO/USA/AUS

7. Connect the plug to the sign, plug-in to wall socket wall socket, switch ON and enjoy.



Hanging - Find a suitable place to hang the sign, consider public safety and available electricity.

1. Ensure your chosen place can take the weight of the **CHIVAS Neon Sign**.
2. Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
3. If using a multi country plug install the correct pins, as shown.
4. Connect the plug to the sign and connect the sign to available electricity.

Freestanding – Consider the area for freestanding your **CHIVAS Neon Sign**.

1. Ensure you have available power socket and area can take the weight.
2. Use the ski feet and thumbscrews (directed below) and attach to the sign.
3. If using a multi country plug install the correct pins as shown.
4. Connect to an available power socket and enjoy your **CHIVAS Neon Sign**.

