

RECYCLING

end of life instructions



Join our commitment to a sustainable future.

Once your **Ballantine's Neon Sign** is at 'end of life' carefully dismantle and recycle, directions shown underneath.


This WEEE symbol affixed to the **Ballantine's Neon Sign**, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to your local environmental recycling centre.

Before disassembly ensure this product is not connected to a power source.

Use a Pozidriv screwdriver and wire cutters to disassemble the unit.

Once the parts are separated follow the recycling instructions shown below.

Disassembly diagram

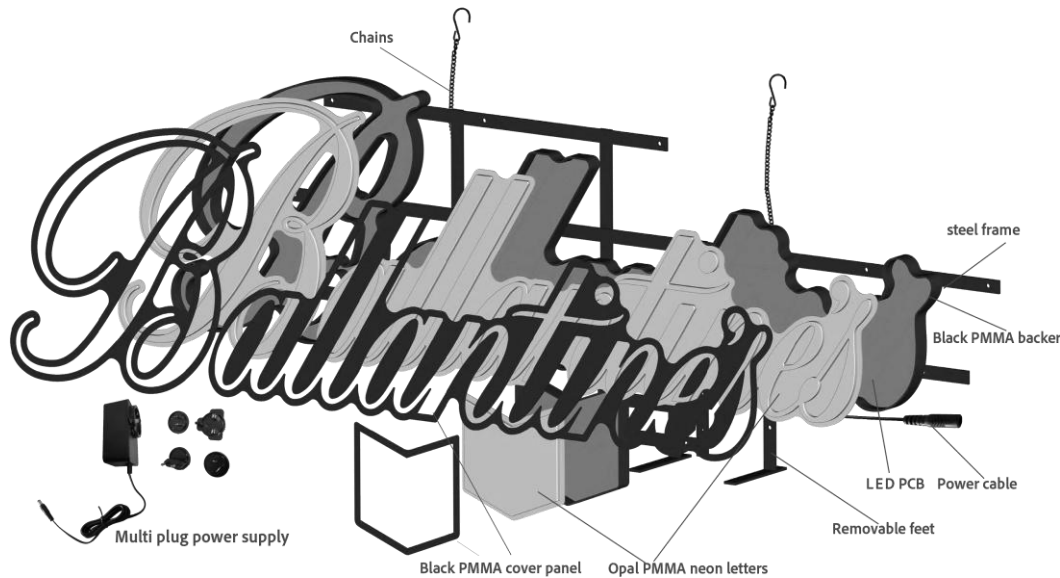

RECYCLING DIRECTIONS

METAL: Steel frame, steel fixings, chains, feet - choose metal recycling bins.

LED, PCB and Plug/Adapter: choose Electronic Equipment recycling bins.

PLASTICS: Plastic packaging materials, PMMA, choose plastic recycling bin and where possible avoid general waste.


CARDBOARD PACKAGING: use the cardboard paper recycling bin. Our FSC certified cardboard is 100% pre recycled, important to retain the circularity.



USER GUIDE

Important to read before using this product

Ballantine's Neon Sign

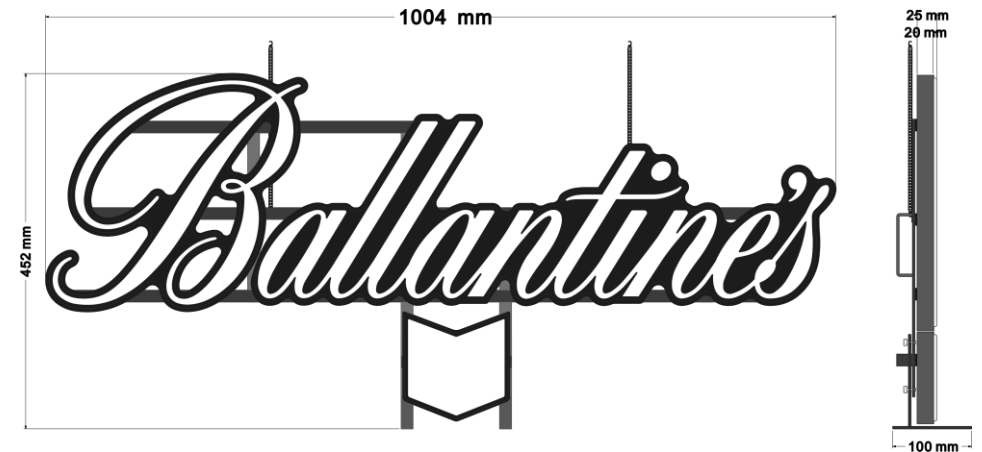


UNPACKING YOUR SIGN

Carefully remove your **Ballantine's Neon Sign** and **Accessories** from the packaging. Try to reuse our packaging or keep for future storage. If disposing, see **Recycling Section**.

Accessories provided

1. 12V Multi Country Plug
2. Anchor/Rawl plugs & screws
3. Hanging chains
4. Legs for freestanding
5. Thumb screws

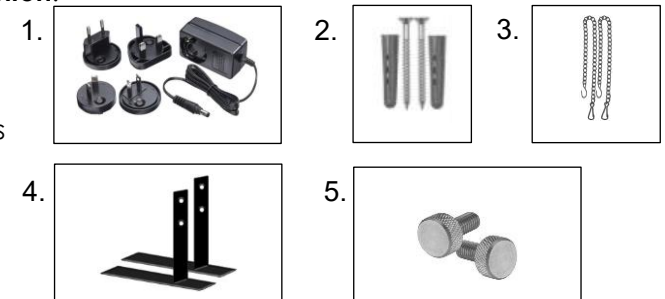

CUSTOM ELECTRONICS

1. PCB-482pcs LEDs type 2835 – max power 36W.
2. Adapter: input 110-240V 50/60Hz - output 12VDC, 3A Multi Country plug-in adapter.

Only use adapter supplied or warranty is invalid.

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **Ballantine's Neon Sign** in a clean and dry environment.

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign is not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken:

- a) Use qualified electrician to inspect or see our Recycling Section

Legal German Information only

Das Symbol des durchgestrichenen Mülleimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.

Auch Verkäufer mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Verkäufer von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsfächen des Verkäufers alle Lager- und Versandflächen.


Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor Sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektrogesezt finden Sie auf www.elektrogesezt.de

INSTALLATION GUIDE

WALL MOUNTING


Choosing Location: Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

Gather the following items.



Follow the instructions

1. Use a spirit level, measuring device and pencil to mark the hole-centres.
2. Depending on wall choose the correct type 6mm drill bit. **ATTENTION** hidden wires and pipes. Carefully drill the holes.
3. Gently tap-in anchors until flat to the wall.
4. Screw-in provided screws until 10mm Exposed. Ensure screws are tight and strong.
5. Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign will not fall.
6. Choose your country plug and plug-in the power.
7. Keep everyone happy and clear the debris ☺

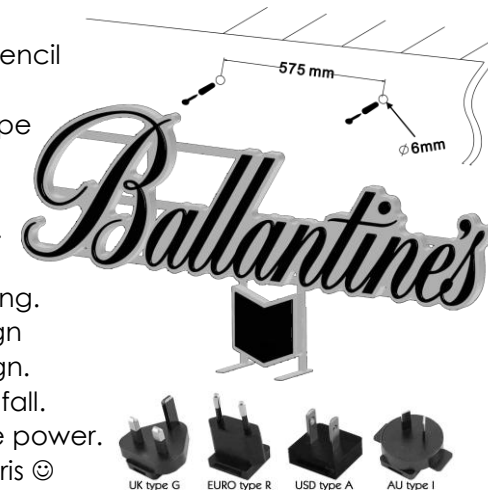


HANGING

1. Find a suitable place to hang the sign, whilst considering available electricity.
2. Ensure the **Ballantine's Neon Sign** can take the weight.
3. Using **2 persons** attach chains to the sign and attach to your chosen area.
4. Choose your country plug and plug-in power.
5. Enjoy your **Ballantine's Neon sign**.

FREE STANDING

1. Find a suitable location to place to freestanding the sign, whilst considering available electricity.
2. Use the supplied 'Legs for Freestanding' and 'Thumb Screws' and attach to the **Ballantine's Neon Sign**.
3. Choose your country plug and plug-in the power.

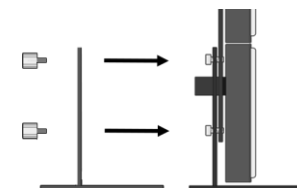

CONTACTS – url: www.illumX.com

Producer: illumX Ltd, The Courtyard, Earl Road, Cheadle, Cheshire SK8 6GN, United Kingdom - Contact: The Compliance Manager at hello@illumx.com for recycling or any other information, reference serial and batch number on the product label.