

RECYCLING

end of life instructions



This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Once your **JDTW Cartouche LED Sign** is at 'end of life' it's important to recycle all the materials and send to an electrical and electronic waste collection point.

DISASSEMBLY tools required to disassemble the sign



Pozi Drive
Screwdriver

Wire Cutters

WARNING – Ensure the sign is disconnected from electricity before disassembly.



RECYCLING INSTRUCTIONS



METAL: Steel frame/Ski feet/Chains/Screws/Thumb Screws/Bolts/Washers/ choose metal recycling bin
ELECTRONICS: LEDs/PCB/Plug Adapter/Dimmer/Wires: choose Waste Electrical and Electronic Equipment (WEEE) recycling bins
PLASTICS: Hard foam/Silicone tubes/PMMA/Foam packaging choose plastic recycling bin, please avoid general waste.
CARDBOARD: use the cardboard paper recycling bin

USER MANUAL

Essential to read before using this product

JDTW Cartouche LED Sign






Items in the Carton

Carefully remove your **JDTW Cartouche LED Sign** from the packaging. Reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

Accessories provided:

- 12v Euro Plug
- Wall plugs/anchors & screws
- Hanging chains
- Ski feet x 2
- Thumb screws x 2

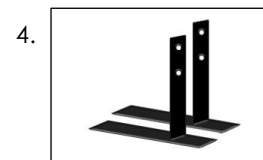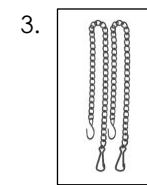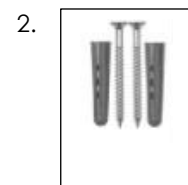

Custom Electronics: PCB-426pcs LEDs **type2835** – max power **36W**.

Adapter: input 110-240V 50/60Hz – output 12VDC, 3A Euro Adapter Plug.

Contacts: hello@illumx.com for recycling info. **Production place:** China.

Maintenance: Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **JDTW**

Cartouche LED Sign.

WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- ensure adapter is pushed in completely and connected to the sign
- check for visible damage to power adapter or connections.

Flickering

- remove adapter and reconnect - secure connections.

Overheating

- if sign is too hot, or smells bad, unplug and allow to cool.
- check the sign is not blocked or has restricted airflow.

Broken:

- If out of warranty, seek professional advice, use qualified electrician to repair.

Legal German Information only

Das Symbol des durchgestrichenen Müllimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.

Auch Verkäufer mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Verkäufer von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Verkäufers alle Lager- und Versandflächen.

Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor Sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektroggesetz finden Sie auf www.elektroggesetz.de

INSTALLATION GUIDE

WALL MOUNTING

Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

Tools required:



- Use a spirit level, measuring device and pencil to mark the hole-centres.
- Depending on the wall type choose the correct 6mm drill bit.
- Carefully drill the wall **ATTENTION** hidden wires & pipes.
- Gently tap-in Wall plugs/anchors until flat to the wall.
- Screw-in screws until 10mm exposed. Ensure TIGHT.
- Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Ensure it's strong.
- Connect the 12V Euro plug to the sign, plug-in to wall socket, switch ON and enjoy.



HANGING


Find suitable place to hang the sign, consider safety and available electricity.

- Ensure chosen place can take the weight of the **JDTW Cartouche LED Sign**.
- Using **2 people** attach chains to the sign and attach to your chosen hanging area above.
- Connect the plug to the sign and connect the sign to available electricity.

FREESTANDING

Consider the area for freestanding the **JDTW Cartouche LED Sign**

- Ensure you have an available power socket and the area can take the weight.
- Use the ski feet x 2 and thumbscrews (directed below) and attach to the sign.

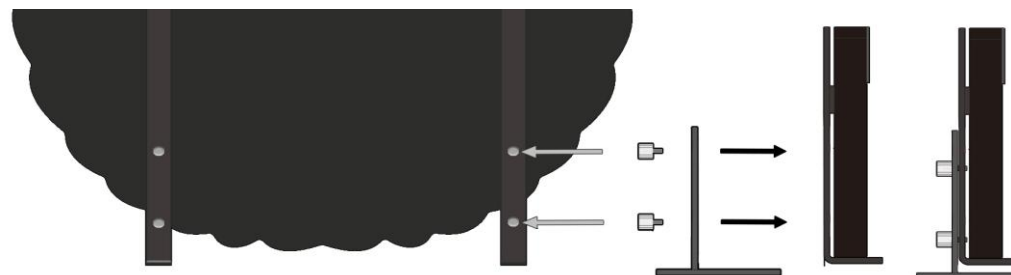

- Connect your 12V Euro Plug.
- Connect to available power socket and enjoy your **JDTW Cartouche LED Sign**.