

RECYCLING

end of life instructions



Join our commitment to a sustainable future.
Once your **RED BULL Wings LED Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical waste collection center.

WARNING


Disconnect before disassembly.

DISASSEMBLY

Gather a Philips or Pozidriv screwdriver and wire cutters. Disassemble unit as shown in this diagram.

RECYCLE

Now you are ready to recycle.

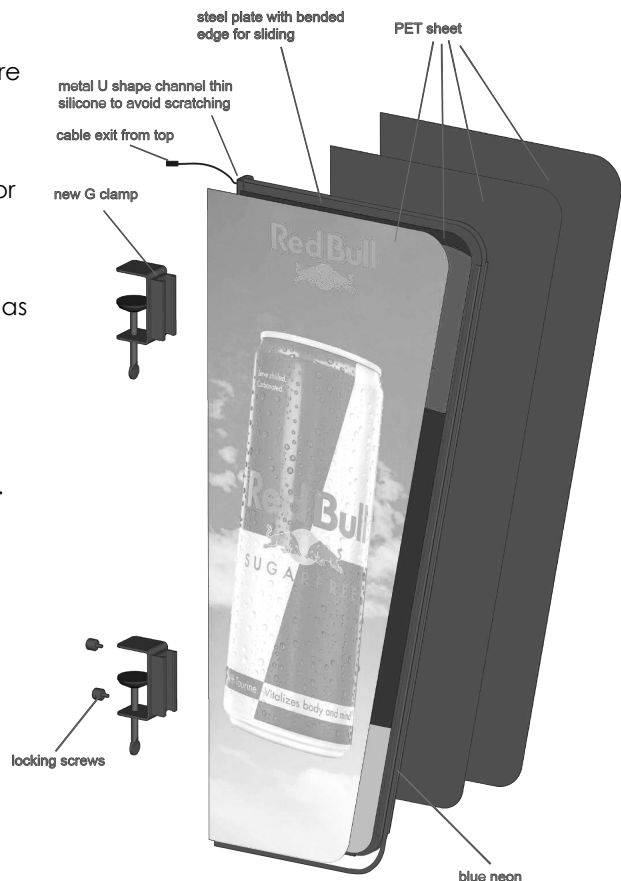

RECYCLING INSTRUCTIONS

METAL – Steel plate, u shape channel, G-Clamps, screws, bolts washers: choose metal recycling bin.

ELECTRONICS: LEDs, PCB, Cables, Plug/Adapter: choose Waste Electrical and Electronic Equipment (WEEE) recycling bin.

PLASTICS: Blue Neon Silicone cover, PET, choose plastic recycling bin general waste.


CARDBOARD PACKAGING: use the cardboard paper recycling bin.



USER MANUAL

Essential to read before using this product

RED BULL 'WINGS' LED SIGN

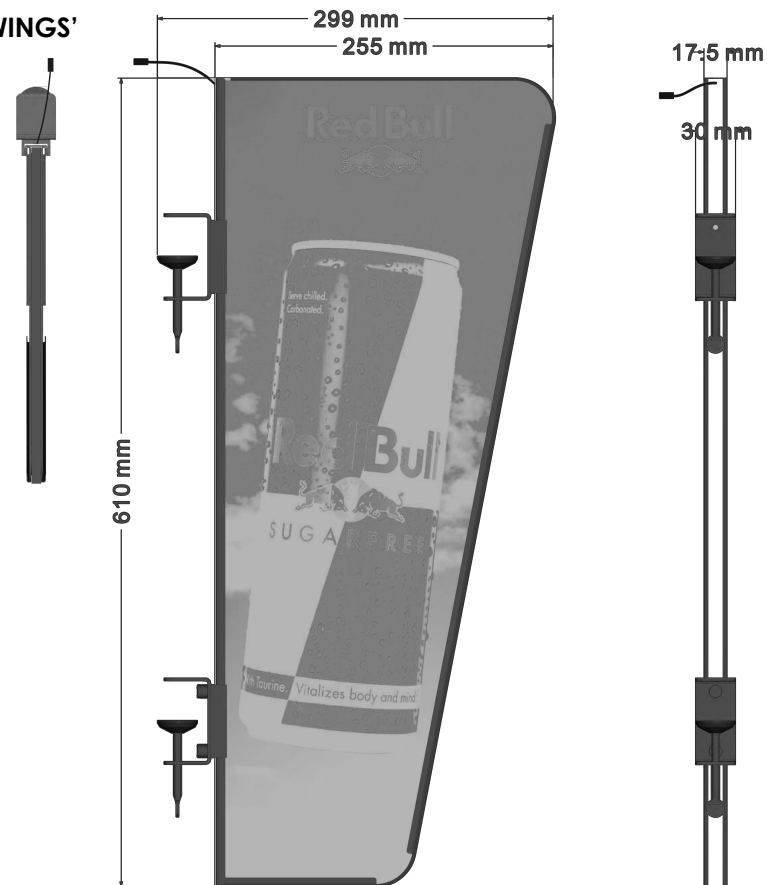


CHECK THE CONTENTS

Remove your **RED BULL Wings LED Sign** from the packaging. Try to reuse our packaging or keep for future storage.
If disposing, see **Recycling** Section.

Accessories provided:

1. 12V Multi Country Plug
2. Left/Right sliding graphics

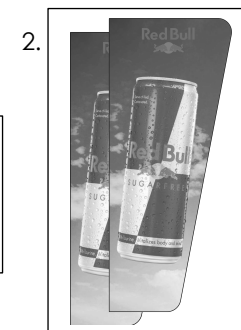

ELECTRONIC INFORMATION

Adapter: input 110-240V 50/60Hz - output 12VDC, 1A – 12W max
LED type: 2835, quantity 108pcs

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **RED BULL Wings LED Sign** in a clean and dry environment.

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- If the external cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation, fix the cable or cord permanently.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Misuse may cause accidents.
- This is not a toy – **keep away from children.**

TROUBLESHOOTING

Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken

- a) Use qualified electrician to inspect or see our Recycling Section.


German Information only

Das Symbol des durchgestrichenen Müllimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten. Auch Vertreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Vertreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Vertreibers alle Lager- und Versandflächen.

Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektrogesetz finden Sie auf www.elektrogesetz.de

INSTALLATION GUIDE

RED BULL Wings LED Sign is a modular product designed to attach to a retail shelf.

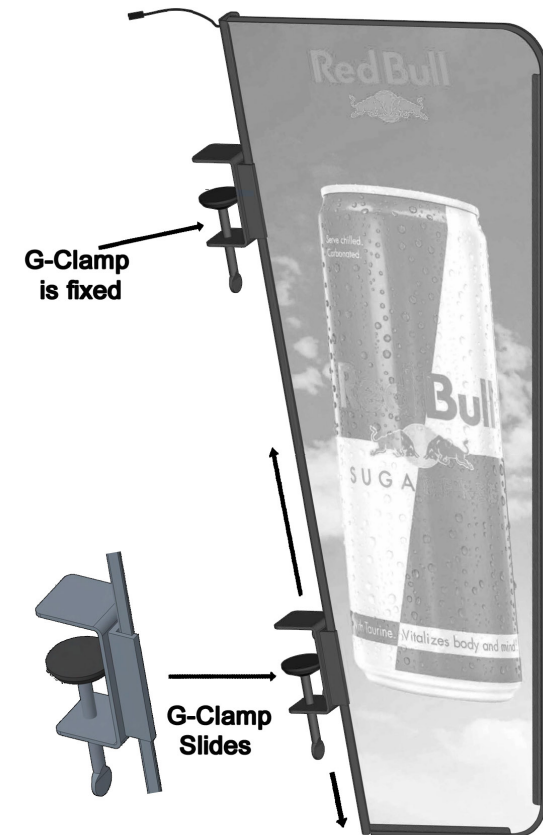

- a. Fix the Bottom G-Clamp to a Shelf
- b. Slide the Top G-Clamp and fix to Shelf above
- c. Ensure the G-Clamps are fixed properly and do not move
- d. Add the Left/Right slide in graphics, as supplied
- e. Choose your country plug
- f. Fix the correct pins to your 12V Plug
- g. Attach Plug cable to the Sign
- h. Ensure the cable is fixed to the shelf
- i. Plug-in to available power socket
- j. Enjoy your **RED BULL Wings LED Sign**

