

## RECYCLING

end of life instructions

Join our commitment to a sustainable future.



Once your **LED Neon Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Once disconnected from power, kindly disassemble all the parts carefully, then send to your local recycling center or recycling agent. We can also arrange recycling services for you. Simply send to the address below and we will recycle your equipment free of charge.

## NOW RECYCLE YOUR MATERIALS

1. **Parts to recycle:** LED, PCB, Electronics and 12v Power supply Euro Plug adapter.

**Recycling Bin:** Choose WEEE - Waste Electrical & Electronic Equipment recycling bins.

2. **Parts to recycle:** Neon, clear plastic PS back.

**Recycling Bin:** Choose PS Plastic bin, or general plastic bin, kindly avoid general waste.

3. **Parts to recycle:** metal bar at the back of the sign, screws, bolts, washers.

**Recycling Bin:** Choose the metal recycling bin

4. **Parts to recycle:** Corrugated cardboard packaging.

**Recycling Bin:** Choose the cardboard and paper recycling bin.



## Instruction Manual

Essential to read before using this product


## LED Neon Signs

Carefully remove your **LED Neon Sign** from the packaging.

Reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

### Accessories provided:

1. 12v Euro adapter
2. Wall plug/anchors & screws

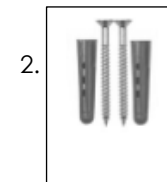

Das Symbol des durchgestrichenen Mülleimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.

Auch Vertreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Vertreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Vertreibers alle Lager- und Versandflächen.

Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum

Elektrogesetz finden Sie auf [www.elektrogesetz.de](http://www.elektrogesetz.de)

## PRODUCER DETAILS

Contact us for further information  
illumX Ltd, Earl Road, Cheadle Hulme, Cheshire, UK SK8 6GN  
Tel: +44(0)1614645687 Email: hello@illumx.com

## MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **LED Neon sign** in a clean and dry environment.

## WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

## TROUBLESHOOTING

### Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

### Flickering

- a) remove adapter and reconnect - secure connections.

### Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.


### Broken:

- a) If out of warranty, seek professional advice, use qualified electrician to repair.


## INSTALLATION GUIDE

### WALL MOUNTING

Select a location with easy access to a power outlet.  
Avoid places with direct sunlight or excessive moisture.

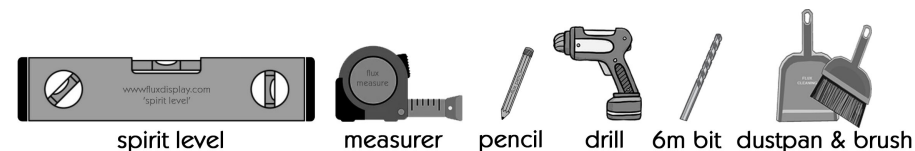

1. Measure the sign's hole centres, then using a spirit level mark the wall.

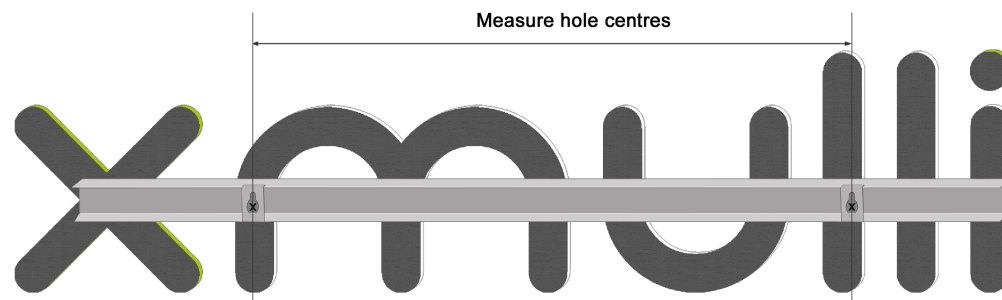

2. Depending on wall choose the correct type 6mm drill bit and carefully drill the 2 holes \*be aware of pipes and wires located in the wall\*
3. Gently tap-in Wall plugs/anchors until flat to the wall.
4. Screw-in screws until 10mm exposed. Ensure TIGHT.
5. Using **2 persons again** gently lift the sign and align the wall screws with the keyhole slots in the sign. Attach the sign and ensure it's strong.
6. Connect Euro plug, switch on and enjoy your sign