


Recycling end of life instructions



Join our commitment to a sustainable future.
Once your **BEEFEATER Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical and electronic waste collection point.

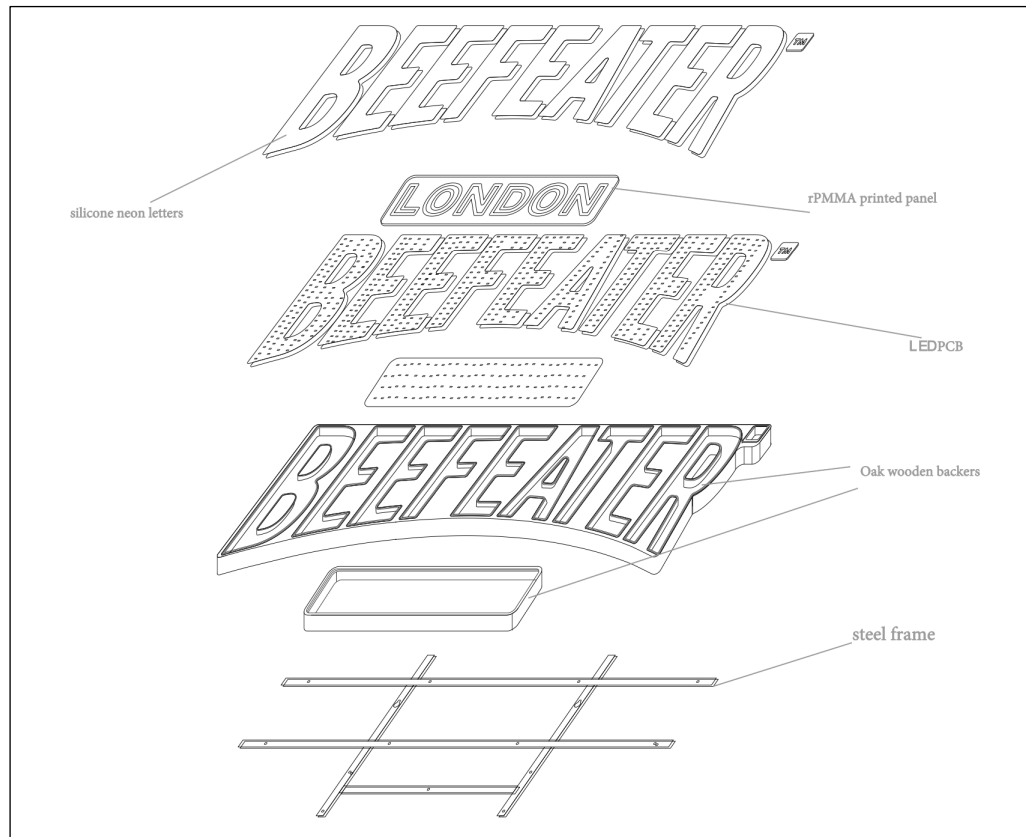

RECYCLING INSTRUCTIONS

Metal: choose metal recycling bin

LED PCB and Plug/Adapter/Charger: choose Waste Electrical and Electronic Equipment recycling bins

CARDBOARD PACKAGING: use the cardboard paper recycling bin

WOOD: choose wood recycling bin



User Guide Instruction Manual

Essential to read before using this product

Thanks for choosing the


BEEFEATER LONDON Neon Sign 2025 edition



Input

100~240V 50/60Hz 1.0A MAX

Output



Made in China: 01/12/2025

Contact: hello@illumx.com for recycling info, WEEE compliance declarations or any further information required. Batch/Serial no: W2677



MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **BEEFEATER Sign** in a clean and dry environment.

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- The external flexible cable or cord of this product cannot be replaced; if the cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation the external flexible cable or cord connected to this product should be effectively fixed to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents/injuries.
- This is not a toy – **keep away from children**

TROUBLESHOOTING

Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.

Broken:

- a) Use qualified electrician to inspect or see our Recycling Section

Legal German Information only

Das Symbol des durchgestrichenen Müllimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.

Auch Vertreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Vertreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsfächen des Vertreibers alle Lager- und Versandflächen.

Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Allampen, bevor sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektrogesetz finden Sie auf www.elektrogesetz.de

1.

Set Up & Installation Guide

Sign: Carefully remove your **BEEFEATER Sign** and **Accessories** from the packaging. Try to reuse our packaging or keep for future storage. If disposing, see **Recycling Section**.


Accessories provided:

1. Multi Country Plug
2. Rawl plugs & screws
3. Hanging chains


1.



2.

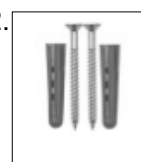


3.

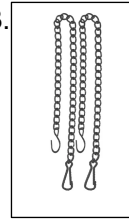

Wall Mounting Guide: gather the following items



spirit level



measurer



pencil



drill




6mm bit



dustpan & brush

Choosing Location: Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

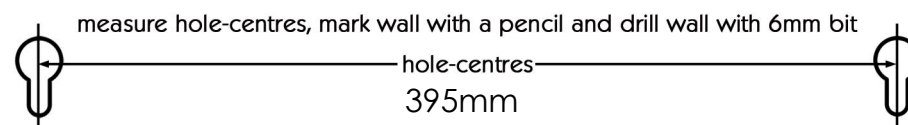

Installing the Sign

Wall mounting

1. Use a spirit level, measuring device and pencil to mark the hole-centres.
2. Depending on wall choose the correct type 6mm drill bit. **ATTENTION** hidden wires and pipes.
3. Gently tap-in rawl plugs until flat to the wall.
4. Screw-in provided screws until 10mm exposed. Ensure screws are tight and strong.
5. Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign is strong and will not fall.
6. If using a multi country plug install the correct pins, as shown below.
7. Connect the plug to the sign, plug-in to the available wall socket, switch ON and enjoy your **BEEFEATER Sign**.
8. Keep everyone happy and clear the debris ☺



Hanging

1. Find a suitable place to hang the sign, whilst considering public safety and available electricity.
2. Ensure your chosen place can take the weight of the **BEEFEATER Sign**. To check this, attach the chains to your chosen area and very gently pull down on the chains to ensure it's going to be strong enough (never pull too hard and damage the hanging area)
3. Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
4. If using a multi country plug install the correct pins, as shown.
5. Connect the plug to the sign, connect sign to the available electricity and enjoy.