

RECYCLING SECTION

end of life instructions



Join our commitment to a sustainable future.
Once your **ABSOLUT Logo LED Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical/electronic waste collection center.

WARNING


Disconnect before
disassembly.

DISASSEMBLY

Gather a Phillips or
Pozi driv
screwdriver and
wire cutters.
Disassemble unit as
shown in this
diagram.

RECYCLE

Now you are
ready to recycle.

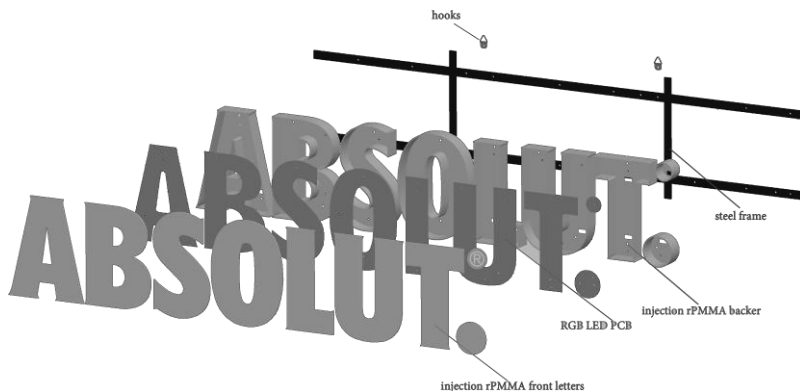

RECYCLING INSTRUCTIONS

METAL – Frame, hooks, screws, bolts washers: choose metal recycling bin.

ELECTRONICS: LED, PCB, Plug/Adapter: choose Waste Electrical and Electronic Equipment (WEEE) recycling bin.

PLASTICS: PMMA, choose plastic recycling bin avoid general waste bin.

CARDBOARD PACKAGING: use the cardboard paper recycling bin.



German Information only

Das Symbol des durchgestrichenen Mülleimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten. Auch Vertreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Vertreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Vertreibers alle Lager- und Versandflächen.


Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektrogesezt finden

Sie auf www.elektrogesetz.de

USER GUIDE

ABSOLUT Logo LED Sign

Essential to read before using this product

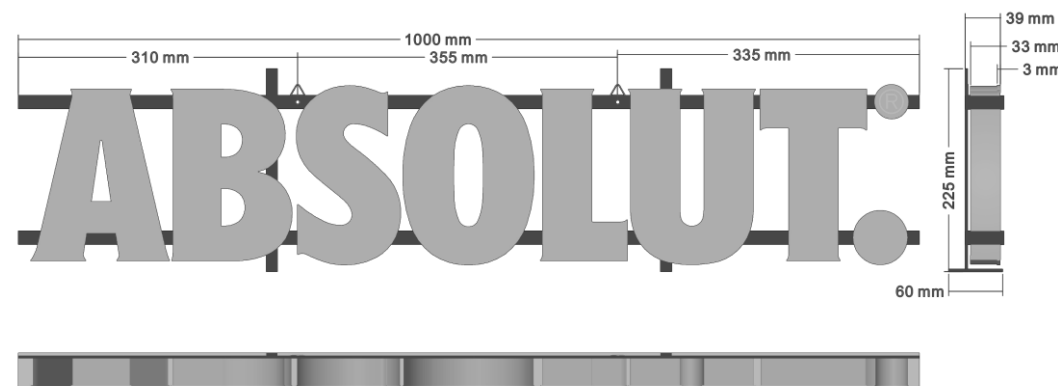


CAREFULLY DOES IT

Remove your **ABSOLUT Logo LED Sign** from the packaging. Try to reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

Accessories provided:

1. 12V Multi Country Plug
2. Rawl Anchors & screws
3. Hanging chains

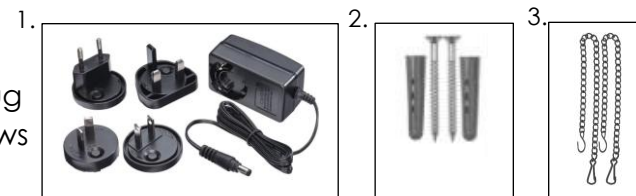

ELECTRONIC INFORMATION

Adapter: input 110-240V 50/60Hz - output 12VDC, 3A multi-country plug-in adapter.

MAINTENANCE

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **ABSOLUT Logo LED Sign** in a clean and dry environment.

CONTACTS

Contact: hello@ILLUMX.com for info.

SPECIAL FEATURE – Programme your chosen Colour/Flavour



1. Locate the QR code under the A

2. Scan the QR Code to launch the App

3. Download the App
Name: Lotus LanternX
- 

3. Pair your device

4. Choose your Colour/Flavour

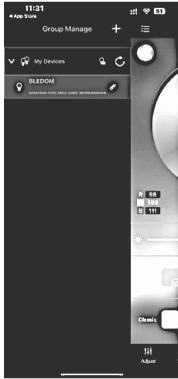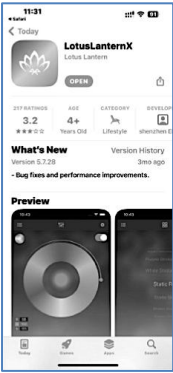

DANGER WARNINGS

- Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or this product or warranty is invalid.
- If the external cord is damaged, the product should be destroyed.
- The light source of this product is not replaceable; when the light source reaches its end of life the whole product should be recycled.
- To reduce the risk of strangulation fix the cable or cord to the wall.
- Never handle electrical items with wet hands.
- Do not use excessive force when inserting/removing connectors.
- This is a fragile item, always handle with care. Any misuse may cause accidents.
- This is not a toy – **keep away from children.**

TROUBLESHOOTING

Sign not lit

- a) ensure adapter is pushed in completely and connected to the sign
- b) check for visible damage to power adapter or connections.

Flickering

- a) remove adapter and reconnect - secure connections.

Overheating

- a) if sign is too hot, or smells bad, unplug and allow to cool.
- b) check the sign is not blocked or has restricted airflow.


Broken:

- a) Use qualified electrician to inspect or see our Recycling Section.


INSTALLATION GUIDE

WALL MOUNTING: Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.

Tools: Gather the following items



- 1. Use a spirit level, measuring device and pencil to mark the hole-centres.

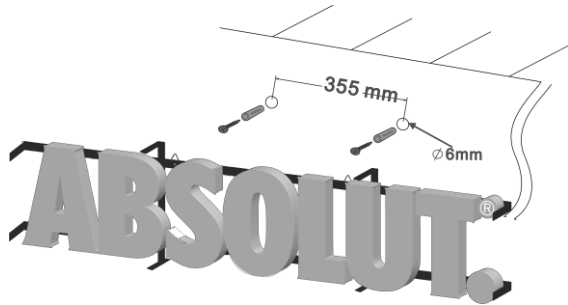

- 2. Choose correct type 6mm drill bit. **ATTENTION** hidden wires and pipes.
- 3. Gently tap-in Rawl Anchors until flat to the wall.
- 4. Screw-in provided screws until 10mm exposed. Ensure screws are strong.
- 5. Using **2 people** lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign is strong, safe and cannot fall.
- 6. If using a multi country plug install the correct pins, as shown.



- 7. Connect the plug to the sign, plug-in switch ON and enjoy.
- 8. Keep everyone happy and clear the debris 😊

HANGING

- 1. Find a suitable place to hang the sign, whilst considering public safety and available electricity.
- 2. Ensure your chosen place can take the weight of the **ABSOLUT Logo LED Sign.** To check, attach the chains to your chosen area and very gently pull down and ensure it's going to be strong enough (never pull too hard).
- 3. Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
- 4. If using a multi country plug install the correct pins, as shown.
- 5. Connect the plug to the sign, connect the sign to the available electricity and enjoy.