

Recycling

end of life instructions



Join our commitment to a sustainable future.
Once your **hattric LED Sign** is at 'end of life' dismantle and recycle.

This WEEE symbol, affixed to this product, indicates this product should not be processed with general waste. Kindly disassemble as directed below then send to an electrical and electronic waste collection point.

RECYCLING INSTRUCTIONS

METAL BAR & FIXINGS: choose metal recycling bin

LED, PCB and Plug/Adapter: choose Waste Electrical and Electronic Equipment (WEEE) recycling bins

PLASTICS: choose plastic recycling bin avoid general waste if possible.

CARDBOARD PACKAGING: use the cardboard paper recycling bin



Instruction Manual User Guide

Essential to read before using this product

hattric LED Sign




Carefully Does It

Carefully remove your **hattric LED Sign** from the packaging. Try to reuse our packaging or keep for future storage. If disposing, see **Recycling** Section.

Accessories provided:

1. 12v Euro Plug
2. Rawl plugs & screws

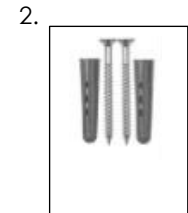

PCB-321pcs LEDs type2835 – max power 36W.

Adapter: input 110-240V 50/60Hz - output 12VDC, 3A multi-country plug-in adapter.

Contacts

Contact: **hello@fluxdisplay.com** for recycling info, WEEE compliance declarations or any further information required. Batch no: W2619 - Made in China: June 2025

Maintenance

Wipe with a warm damp cloth, no chemicals. Regularly check connectors for damage. If not installed permanently, keep packaging and store your **hatric LED**

Sign in a clean and dry environment.

Warnings

Do not modify, disassemble, open, drop, crush, puncture, shred and/or replace any of the accessories and/or parts or warranty is invalid. **DANGER!** Never handle electrical items with wet hands. Do not use excessive force when inserting/removing connectors. This is a fragile item, always handle with care. Any misuse can cause accidents and/or injuries. This is not a toy – **keep away from children.**

Troubleshooting

Sign not lit

- ensure adapter is pushed in completely and connected to the sign
- check for visible damage to power adapter or connections.

Flickering

- remove adapter and reconnect - secure connections.

Overheating

- if sign is too hot, or smells bad, unplug and allow to cool.
- check the sign is not blocked or has restricted airflow.

Broken:

- If out of warranty, seek professional advice, use qualified electrician to repair.

Legal German Information only

Das Symbol des durchgestrichenen Müllimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.

Auch Verreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Verreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Verreibers alle Lager- und Versandflächen.


Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektroggesetz finden Sie auf www.elektroggesetz.de

Installation Guide

Wall mounting

Choosing Location: Select a location with easy access to a power outlet. Avoid places with direct sunlight or excessive moisture.


Tools: Gather the following items



Follow the instructions

- Use a spirit level, measuring device and pencil to mark the hole-centres.
- Depending on wall choose the correct 6mm drill bit. **ATTENTION** hidden wires and pipes.
- Gently tap-in rawl plugs until flat to the wall.
- Screw-in provided screws until 10mm exposed. Ensure screws are tight and strong.
- Using **2 persons** gently lift the sign and align the wall screws with keyhole slots in the sign. Once completed, ensure the sign is strong and will not fall.
- Connect the plug to the sign, plug-in to the available wall socket, switch ON and enjoy.
- Keep everyone happy and clear the debris 😊

Hole Centres

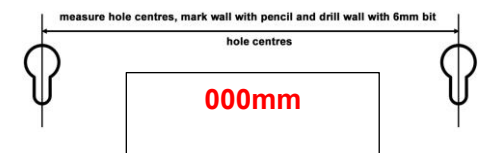

Hanging

- Find a suitable place to hang the sign, whilst considering public safety and available electricity.
- Ensure your chosen place can take the weight of the **hatric LED Sign** To check this, attach the chains to your chosen area and very gently pull down on the chains to ensure it's going to be strong enough (never pull too hard and damage the hanging area)
- Using **2 persons** attach chains to the sign and attach to your chosen hanging area above.
- Connect the plug to the sign, connect the sign to the available electricity and enjoy.