

RECYCLING

Join our commitment to a sustainable planet. Once your Hendrick's LED Ice Bucket is at 'end of life' kindly disassemble and recycle as follows


TOOLS FOR DISASSEMBLY



WARNING DANGER

Disconnect LED base from charging source. Once LEDs are non-illuminated this product can be disassembled. Handle the hazardous Polymer Lithium-ion battery with great care, do not drop or puncture.

DISASSEMBLE - No's 1-12 as shown below

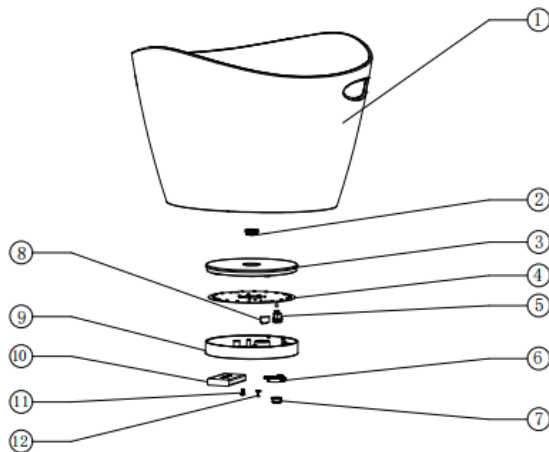

ID	Component / Material
1	Plastic Bucket
2	Magnet
3	Plastic cover
4	PCB board
5	DC socket
6	Plastic
7	Silicon power switch cap
8	TYP-C charging PCB board
9	Plastic base
10	1500mAh lithium battery
11	Metal screw
12	Metal screw

WASTE RECYCLING CENTRE

This product contains electronics and a Polymer Lithium-Ion battery, therefore should not be placed in general waste. Kindly separate as follows and send to a recycling centre.

ALL PLASTICS: PMMA or Plastic recycling bins (avoid general waste)

ALL ELECTRONICS: WEEE recycling bins

BATTERY (Polymer Lithium-Ion Cell): BATTERY recycling Bins

MAGNET: Discuss with recycling centre **DO NOT USE METAL RECYCLING BINS**

ALL METALS AND IRONMONGERY: Metal recycling bins

ALL PACKAGING: Cardboard recycling bins

USER MANUAL

HENDRICK'S LED ICE BUCKET

Item code: ADMWGHK00025

Origin: Manufactured in China

Importer: ADM-Indicia, 26-28 Bedford Row, London, WC1R 4HE



CONTENTS

Remove the **HENDRICK'S LED Ice Bucket** and contents from the packaging. Try to reuse the packaging or keep for future storage. If disposing, see **RECYCLING**.



Ice Bucket



Rechargeable LED base



USB-A-USB-C Charging Cable

PRODUCT INFORMATION

Unit size: 38cm wide x 26cm high x 29cm deep

Sustainable Material Choices: All plastics are produced from post-industrial food grade recycled PMMA (Poly(methyl methacrylate))

Finishing: water-based paint, with laser engraved logos

Electronics: PCB containing 27pcs 2835 SMD LEDs

Wattage: 0.888W

Battery: 3.7V **Polymer Lithium-ion Battery**, 1500mA

Input: 5.0V DC, 1.0A, 5.0W

Charging time: 5 hours (depending on charging source)

Charge life-cycle autonomy: 6-8 hours

DEUTSCHLAND INFORMATION

Das Symbol des durchgestrichenen Mülleimers besagt, dass dieses Elektro- bzw. Elektronikgerät am Ende seiner Lebensdauer nicht im Hausmüll entsorgt werden darf, sondern vom Endnutzer einer getrennten Sammlung zugeführt werden muss. Zur Rückgabe stehen in Ihrer Nähe kostenfreie Sammelstellen für Elektroaltgeräte sowie ggf. weitere Annahmestellen für die Wiederverwendung der Geräte zur Verfügung. Die Adressen können Sie von Ihrer Stadt- bzw. Kommunalverwaltung erhalten.

Auch Vertreiber mit einer Verkaufsfläche für Elektro- und Elektronikgeräte von mindestens 400 Quadratmetern sowie Vertreiber von Lebensmitteln mit einer Gesamtverkaufsfläche von mindestens 800 Quadratmetern, die mehrmals im Kalenderjahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen, sind verpflichtet unentgeltlich alte Elektro- und Elektronikgeräte zurückzunehmen. Diese müssen bei der Abgabe eines neuen Elektro- oder Elektronikgerätes an einen Endnutzer ein Altgerät des Endnutzers der gleichen Geräteart, das im Wesentlichen die gleichen Funktionen wie das neue Gerät erfüllt, am Ort der Abgabe oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen sowie ohne Kauf eines Elektro- oder Elektronikgerätes auf Verlangen des Endnutzers bis zu drei Altgeräte pro Geräteart, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, im Einzelhandelsgeschäft oder in unmittelbarer Nähe hierzu unentgeltlich zurückzunehmen. Bei einem Vertrieb unter Verwendung von Fernkommunikationsmitteln gelten als Verkaufsflächen des Vertreibers alle Lager- und Versandflächen.

Sofern das alte Elektro- bzw. Elektronikgerät personenbezogene Daten enthält, sind Sie selbst für deren Löschung verantwortlich, bevor Sie es zurückgeben. Sofern dies ohne Zerstörung des alten Elektro- oder Elektronikgerätes möglich ist, entnehmen Sie diesem bitte alte Batterien oder Akkus sowie Altlampen, bevor Sie es zur Entsorgung zurückgeben, und führen diese einer separaten Sammlung zu. Weitere Informationen zum Elektroggesetz finden Sie auf www.elektroggesetz.de

USA INFORMATION

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does not cause harmful interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help

CLEANING – WARNINGS - CHARGING THE LED BASE

CLEANING

1. Separate the Ice Bucket and the LED Base.
2. The Ice Bucket should only be rinsed in warm water. **Chemicals should not be used as it's intended for ice and water for human consumption.**
3. Wipe the LED base with a damp cloth only. Do not immerse the LED base in water and ensure the LED base is dry before attempting to charge the unit.
4. Avoid water entering through the USB socket, ensure it's dry before handling.

WARNINGS

1. LED base contains a **Polymer Lithium-ion battery**. Do not charge if wet.
2. Keep the LED base away from heat/direct sunlight/fire.
3. Immediately cease using the LED base if it becomes damaged, is swollen, leaking, overheating or smells pungent.
4. Disconnect USB charging cable once fully charged.
5. Only use charging cable supplied or may damage the unit.
6. Ensure water does not enter through the USB socket and is dry before charging.
7. Do not attempt to modify, drop, crush, puncture, shred and/or replace any of the parts or warranty is invalid.
8. Do not use excessive force when inserting or removing connectors.
9. The electronic parts and lighting are not replaceable. If this unit becomes faulty refer to **RECYCLING**.
10. Fix down the charging cable to avoid strangulation.
11. Keep away from children or the vulnerable.
12. Any misuse of this product can cause accidents or injuries.

CHARGING

Use the charging cable provided and plug the USB-C connector underneath the LED base as shown

Plug the USB-A cable into an available socket.

Once both USB's are connected notice a special colour LED amongst the white LEDs, this is the charging indicator light.

RED: light indicates charging.
GREEN: light indicates fully charged.

